

# AQUA STICK



Bondable, fillable for both "underwater" & "wet surface"

Compliant to Water Quality Criteria

# AQUA STICK

DRINKING WATER LINE OK

Built-in type underwater forming epoxy resin filling adhesive material



underwater adhesive  
**No.1 Effect**



It forms water-resistant bonding membrane when using under water & wet surface by the intermolecular bonding effect.



## How to use AQUA STICK

\* Wipe the rust, oil, and dirt off from the bonding surface before use.



Take out from bottom and cut in round slice.



Squash material by spatula or trowel



Mix until the color turns to uniform milky-white.




Paste like wiping and hold until harden.

## Usage of AQUA STICK


Various metals

Concrete, FRP, and Vinyl Chloride, etc.


\*surface preparation needed for stainless

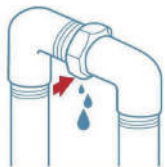


Pipe leakage  
Repairing

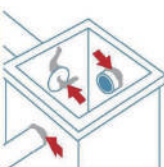


Catch-basin  
Repairing

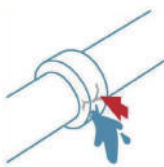

Hume pipes  
Repairing

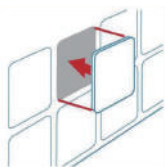

Tiles  
Bonding

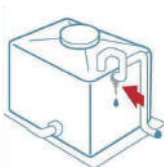

Tanks  
Repairing



Ceramics  
Bonding

Hardening Time	60~180 min.[25°C]	Main Agent	Hardener
Heatproof Temp.	56°C	Shape	Stick
Compressive Strength	920kgf/cm <sup>2</sup>	Specific gravity	1.16      1.10
Tensile strength	650kgf/cm <sup>2</sup>	Appearance	Clear      Milky-White
Bending strength	1,120kgf/cm <sup>2</sup>	Component	Modified Epoxy      Modified Polyamine

※ Test result data based on our testing procedures. Your using condition is beyond our jurisdiction.

### CAUTION

- Do not use other than specific purposes.
- Make sure the working area is well ventilated.
- Be careful not to adhere to the skin, and wear protecting mask, gloves, and safety goggles if necessary.
- Wipe off immediately when adhered to the skin, then wash with soap and water sufficiently.
- Take medical examination if necessary, such as becoming unwell case.
- Store in a cool and dark place. Expiry date is 1 year from manufacturing date.
- Use it up as soon as possible after opening.
- Dispose wastes under the disposal regulations.
- Keep, store and dispose in safe to prevent infant and children from touching.